


# Front Door Speakers

## NOTES:

### Please read first

• Instructions show factory size speakers or speakers with adaptor brackets only. Cutting or fabricating (not shown) will be required for other speaker sizes.

1. Pry out top of “sail” panel to release one (1) metal clip. **Note:** Do not remove panel.
2. Pry from front and rear edge of **power options switch panel**. Pull out panel, disconnect wiring harnesses and remove panel.
3. Remove one (1) 10mm screw at rear of **cavity** exposed by removal of switch panel.
4. Remove one (1) 10mm screw located under **door pull handle**.
5. Pry around sides and bottom of **door panel** to release nine (9) plastic clips. Lift door panel and pull to remove.
6. Pull **foam surround** away from speaker. Remove four (4) Torx T-15 screws from speaker. Pull out speaker, disconnect and remove.
7. Use pliers to break off **line-up tabs** from factory speaker bracket to allow new speaker to fit flush against bracket (Inset).
8. Secure new speaker to speaker adaptor bracket following instructions supplied with brackets. Break off the three (3) **square mounting tabs** on speaker bracket (see Inset). **Note:** These tabs are not used in this application.
9. Connect speaker wiring adaptor or replacement speaker to vehicle speaker connector. Secure **speaker/bracket assembly** with screws previously removed (Inset).
10. Test speaker operation and reinstall door panel by reversing removal steps.

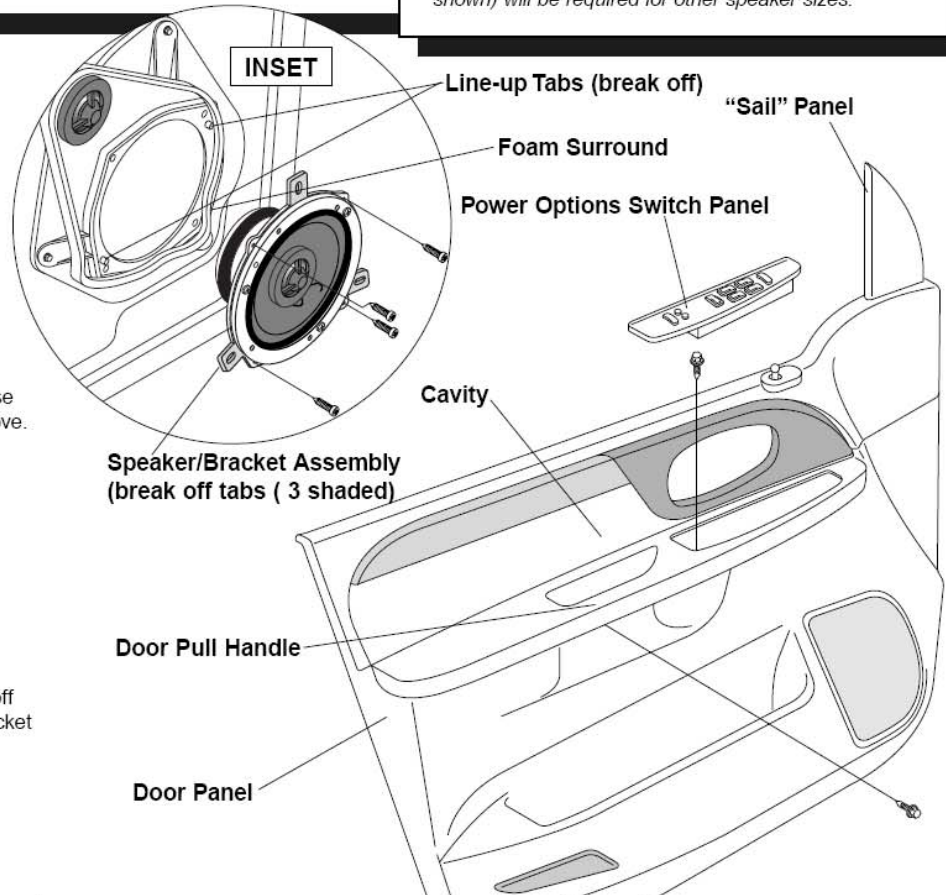

## SAFETY CHECK

- ✓ Check that wires do not interfere with window operation.
- ✓ Test door lock operation.



1-800-955-9094  
Technical Service